

## 6 Connect to the electricity supply

Connect the power cord to the appropriate electrical socket with an equivalent current rating indicated on the rating plate at the front of the machine behind

the kick plate.


See the instruction book before operating your washing machine for further information.

## 7 Operation

- Sort the laundry into groups with the same wash requirements.
- Place laundry in the machine and gently close the door.
- Add detergent/conditioner to the appropriate compartments - see detergent manufacturer's instructions.
  - Fill the fabric softener to the


marking. Do not overfill above the max mark as any excess amount will mix into the wash water and you will have to re-fill the compartment.

Concentrated softener may clogg the siphon, in this case add some water to the softener liquid.

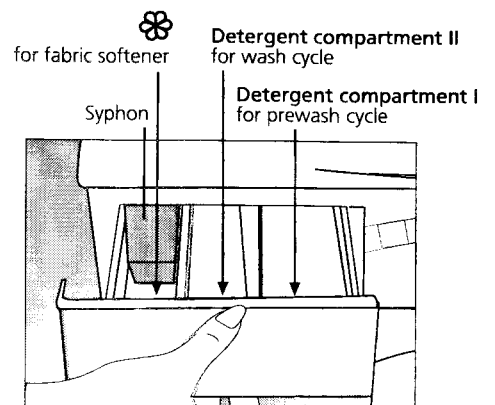

## 8 Select a program

- Press to release.
- Turn the knob clockwise to select the required program.

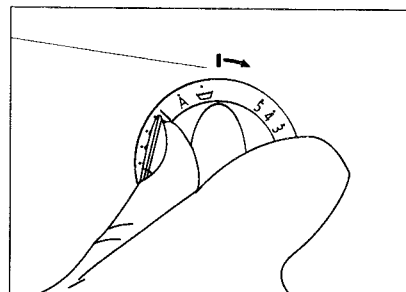

Programme	Dispenser compartment	Quick Wash #	Additional Rinse #	Rinse hold	Anti creasing	Wash Temp. °C	Load kg	Fabric type
1	I+II		*		*	90	5.5	Heavily soiled cotton and linen
2	II	*	*		*	90	5.5	Normal soiled cotton and linen
3	II					60	5.5	Heavily soiled cotton and linen
4	II	*	*		*	60	5.5	Lightly soiled cotton and linen
5	II	*	*		*	40	5.5	Very lightly soiled cotton and linen
A								Spin for cotton and linen
6	I+II			*	*	60	2.5	Heavily soiled synthetic
7	II	*	*	*	*	60	2.5	Normal soiled synthetic
8	II	*	*	*	*	40	2.5	Coloured synthetics
9	II	*	*	*	*	30	2.5	Coloured synthetics
B								Spin for synthetic and delicates
10	II		*	*		40	1.5	Woolens
11	II		*	*		30	1.5	Woolens
12	II			*		40	2	Delicate fabrics
C								Spin for woollens and delicates
D								Discharging/Pump

\* Options available


# Quick wash and additional rinse functions can not be selected together.

## 9 Switch on

### Attention!

Before any operation of the machine check the following:

- Have you closed the front door?
- Are the taps open?
- Is the drain hose placed and secured properly?
- Is power connected?

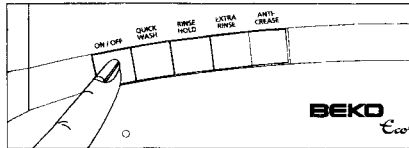

Start the program by pressing the On/Off knob to the On position. The door will be locked and the indicator will light.

### Program operation.

During the machine's operation, the programme selection knob turns clockwise to the correct position and follows the programme steps.

If fabric softener is added in the softener compartment, it will be used in the last rinse cycle.

If rinse hold is selected, by re-pressing this button, you can continue the program. If no spin is desired, you should leave the rinse hold button pressed in. Turn off the machine, select the letter D on the programme selection knob and turn on the machine. During this operation, water in the machine will be discharged.

## Optional wash features

### Quick wash

This function should be used for lightly soiled fabrics. If you press this button, the washing time will be reduced.

### Rinse hold

Select rinse hold to minimise your synthetic fabrics becoming wrinkled after the wash program. To continue the programme, you can either press the Rinse hold button again or select D on the programme selection knob to drain the water. If there is a

power failure or if for any reason the machine is disconnected from the mains supply, the programme must be advanced to pump out the water as the drum will be full of water and unless the water is emptied, water spillage could occur.

### Extra rinse

Using this function, you can have 4 rinse cycles instead of 3 in cottons programmes. The additional spin will extract more detergent for sensitive skin.

### Anti-Creasing

To avoid wrinkling of your clothes, select this function. When Anti-Creasing is chosen please load less clothes, this way a special washing and spinning profile will reduce the wrinkles and your clothes will be easy to iron.

## 10 Unloading

The machine stops automatically after programmes are completed.

- 1 Press the On/Off knob to turn off your machine.
- 2 The door can be opened by gently pulling the door open

handle 1-2 minutes after the washing cycle is completed.

Turn off the taps.

- 3 Unload the machine, and leave the door open to air the interior.

# BEKO

Beko plc. Beko House, Caxton Way, Watford  
Hertfordshire, WD18 8UF